

# DoorKing Beidi Intelligent 600/ 800 Garage Door Operator

## Quick Set Up Guide

Attach motor head to boom and suspend from the ceiling as shown in main installation book on page 4 and 5

Do not try and programme the system until the door is locked into the boom of the operator  
move the door to meet the connecting point on the chain until it clicks .

## Programming The Remotes

Turn on the power and "H" is flashing on the LED display.

Press "LC" on the motor head buttons and the Led display changes to "O".

Press any button on the remote control that you want to use .

The "O" in the LED display disappears .

Press the same remote button again .

Repeat for more remotes .

**Stop** , do not press the same button on the remote again, you will distort the sequence and make the following adjustments difficult .

## Setting the travel stops (Limits )

**Have the remote in your hand before continuing.**

Hold "c" on the motor head for more than 3 seconds .

The LED display changes to "L" and the door will be **traveling downwards** .

Get ready with the remote control and when the door reaches the closed position press the remote control once

The door will automatically start to open .

When the door reaches the fully open position press the remote **once** to stop.

The door will automatically be moving back to the closed position .

When the door is closed the sequence for limit setting is complete .

**Check the tension on the chain, is it slack on one side ?If so adjust -**

## Chain tension adjustment .

The door is still closed .

Press the "F" on the motor head more than 3 seconds .

The LED displays "P".

Press "F" on the motor head and the display changes with each press to "1" "2" "3".

Choose "3" and press "C" The LED displays "N" .

The door can now be moved slightly in both directions by pressing "f" or "c" .Forwards or reverse .

Keep adjusting until you are happy but if no adjustment is made within

30 seconds the motor will exit set up and you need to start again .

Once you are happy press the remote control

Number"3" will be flashing in the Led Display .

When it has finished and returned to H you have completed the adjustment .

You **must** now test the sensitivity and adjust as required .

Refer to page 9 of the manual .

Do **not** activate auto closing without a secondary safety device such as

Photo Cells , these are available from your dealer .

Refer to manual for other functions and trouble shooting .

Help line - 0844 582 1444 8.30 - 5pm M-F